


ascom

[QUICK REFERENCE GUIDE | EN]

claricom

UNIFIED COMMUNICATIONS SYSTEMS



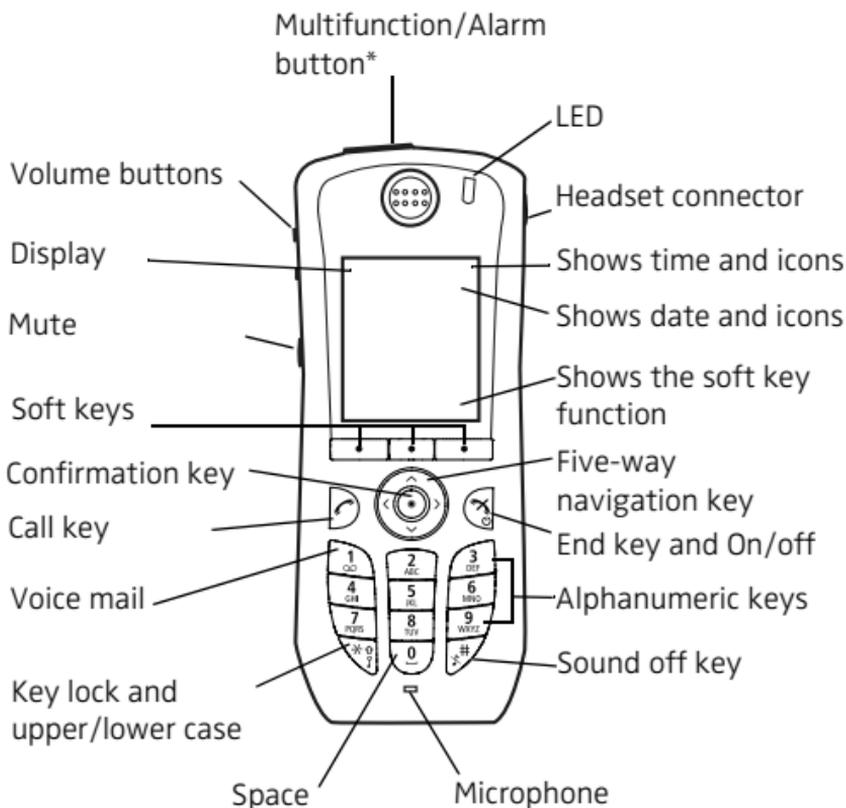

Display Icons



Signal strength



Battery status



Microphone off



Loudspeaker on



Loudspeaker off



Sound off



Headset connected



New message



New message with request for answer



New message, important



New message, alarm priority

Display Icons

-  Voice mail
-  Read message
-  Sent message
-  New colored message
-  Read colored message
-  Man-down alarm active
-  No-movement alarm active
-  Profile active
-  Missed call
-  Incoming call
-  Outgoing call
-  Missed call
-  Connected call
-  Call on hold
-  Call diverted
-  To contacts
-  Locked keypad
-  Locked entry (e.g. company phonebook)
-  Locked handset
- PTT** Push-To-Talk
-  Handset with Talker license.
-  Handset with Messenger license.
-  Handset with Protector license.

Basic Functions

Switch the handset on/off

Press and hold the End key  to switch the handset on or off. When switching the handset off, "Switch off?" is displayed, press "Yes".

Make a call

Dialling can be made in the following ways:

- In standby mode, dial the number and press the Call key  or the Soft key "Call".
- Press the Call key  and select number from the Call list.
- Press a pre-programmed Hot key¹ or Soft key.
- Dial a number from the local phonebook. Enter the Contacts menu, select "Call contact" and select the name from the list, press "Call" or the Call key .
- Dial a number from the Central phonebook. Enter the Contacts menu, select Central phonebook > search by name/number/last result, and press search. Press Call key  or the Soft key "Call".

Answer/End a call

When the ring signal sounds; press the Call key  to answer.

To end the call, press the End key  or the right Soft key.

Reject a call

When the ring signal sounds; press the End key . Call information will be stored in the Call list.

Turn loudspeaker on/off

During a call, press the left Soft key to turn the loudspeaking function on/off.

Turn audio signals on/off

In idle mode a long press on the Sound off key , or a long press on the Mute button , changes between audio signals on/off. The icon  indicates a silenced handset.

1. The alphanumeric keys can be programmed with a telephone number.

A short press on the Sound off key  or a press on the Mute button  before answering a call, silences the ring signal.

Lock/Unlock the keypad manually

Press the *-key to lock/unlock and then Soft key "Lock/Yes". The "Locked keypad" icon  indicates a locked keypad.

Change the volume during a call

Press  to increase the volume, and  to decrease the volume.

Charge the battery

Charging is done in a desktop charger or in a charging rack. Charging is indicated by orange LED. When the battery is fully charged the LED is green and a fully charged "Battery" icon  is displayed.

While in a desktop charger the handset is fully operational. The handset does not vibrate in a charger.

The battery can also be charged in a separate battery pack charger.


Note: Charging below 5 °C will harm the battery and shorten the lifetime.

Remove the battery

It is recommended to switch off the handset before removing the battery.

Menu Operation

For descriptions of all functions, see *User Manual, Ascom i62 VoWiFi Handset, TD92599EN*.

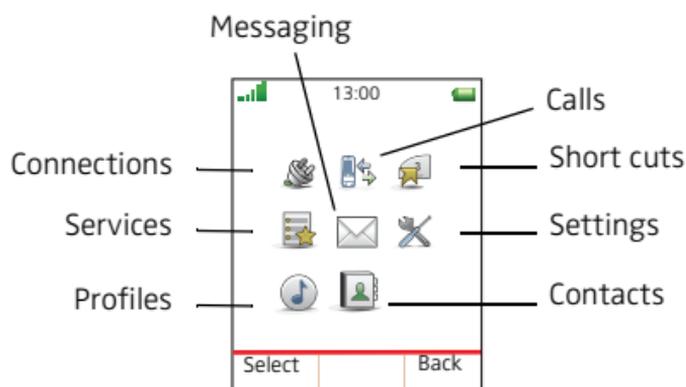

Use the Navigation key  to move around in the menu structure.

The menus for Messenger and Protector are; "Connections", "Calls", "Short cuts", "Services", "Messaging", "Settings", "Profiles", and "Contacts".

The menus for Talker are; "Connections", "Calls", "Contacts", "Short cuts", "Profiles", and "Settings".

The three Soft keys below the display are used for choices in the menu. The function of each Soft key is explained by text in the soft key field in the display.

Contacts

Use the local phonebook

To find and call a name: Enter "Contacts" , step to "Call contact" and press "Select". Enter the first letter in the name or the whole name (will be displayed in Search field while entering text), or step in the contact list. Select the name and press "Call".

To edit the contact: Select "Edit contact", select the name and press "Edit" twice. Make your changes, press "OK" and then press "Save".

To add a contact, select "Add contact", select "New" or "From call list". Press "Add", enter the name and press "OK". Select "Work number", "Mobile number" or "Other number" enter the number, press "OK" and press "Save". If desired, choose a specific ring signal for the contact.

To delete a contact: select "Delete contact", select the name, press "Delete", and then press "Yes".

Use the central phonebook

Enter "Contacts" , and select "Central phonebook". Select "Search by name", "Search by number", or "Last result". Enter the first letter(s) in the first name, and/or the first letter(s) in the family name. Press "Search". The Central phonebook will be searched and a list of matching names will be displayed. You can step to the next entry in alphabetic order by pressing the Navigation key. Press "More" to add contact, or press "Call" or the Call key  to make the call.

Use the company phonebook

To find and call a name: Enter "Contacts" , step to "Call contact" and press "Select". Enter the first letter in the name or the whole name (will be displayed in Search field while entering text), or step in the contact list. A contact from the company phonebook is marked with the  symbol, which means that it is not editable. Select the name and press "Call".

Soft keys, hot keys and multifunction button

The three Soft keys below the display can be defined for specific functions such as dialling a specific number. A long press on a Hot key can have the same function as a Soft key and any key "0", "2" - "9" can be programmed as a Hot key. The Multifunction button  can also be programmed for different functions with the use of long press and double press.¹

Messaging

Note: Applicable to Messenger and Protector license only.

Receive a text message

When a text message is received, the LED starts flashing and a message tone sounds. The icon  and the received message is

1. Applicable to Talker and Messenger license only.

automatically displayed (if a voice mail also is received the icon will change to ). The icon will remain in the display until all new messages are opened. If the message is received during a call, a beep notifies the user.

It is possible to reply, forward the message, call the sender, and call a number¹ included in a text. It is also possible to read the message later by pressing "Close". A received message is stored in the Inbox. The thirty last received messages are stored in the Inbox. Time and date information is included in the message.

Read a stored message

Press the "Menu" soft key, select , select "Inbox". Use  and  on the Navigation key to navigate in the list. Select message and press the soft key "View" to read the message.

Send message

Press the "Menu" soft key, select , and select "Write new message". Enter text, press the soft key "Send", and then enter a number, or press the soft key  for phonebook look-up. Press "Send".

Delete a stored message

Press the "Menu" soft key, select , and "Inbox". Use  and  on the Navigation key to navigate in the list. Select message and press View > More > Delete. Press the "Yes" soft key to delete the message.

Check voice mail

A new voice mail is indicated by the "New voice mail"  icon. Only one voice mail at the time will be displayed in the Inbox.

Press the "Menu" soft key, select , and "Inbox". Select message (indicated with  in front of the message), and press the soft key "View". Press "Call" or .

Alternative:

A long press on  will call your voice mail.

If the extension number is not available, the text "Voice mail number not defined" is displayed.

1. The number must consist of minimum three digits.